

GPR V4 Mounting Instructions 2014 Yamaha FZ-09




1. You will need to remove the Stock bar caps, Handlebar, lower bar mounts and odometer from the triple clamp.
2. Remove the plastic cover on the front of the tank with the 4 plastic rivets.
3. Remove the stock steering stem nut. You will not use it with the GPR kit. Install the supplied new washer and steering stem nut to the steering stem and torque to the OEM spec. (Pic 1)
4. Install the post mount to the frame, using the single bolt on the airbox. Make sure to align the two tabs to each side of the headtube of the frame. Once the bracket is centered tighten down the bolt. (Pic 2)
5. Now time to install the bar mounts. One at a time place the damper plate on the triple clamp and use the supplied new bar mount bolts to tighten the bar mounts to the triple clamp. Do not tighten all the way. (Pic 3) **Make sure the damper plate is installed with the 2 countour bores are facing upwards.
6. Best way to line up the bar mounts is to mount the bars in the bar mounts, install the bar caps and then torque down the bar mount bolts. This will assure the bar mounts are strait.
7. Once you have the bar mounts torqued down, Remove the bar caps and bars,
8. Install the GPR V4 stabilizer to the damper plate, making sure the arm is in the slot on the post mount. (Pic 4)
9. Once the damper is tightened down, tighten the pinch bolt on the side of the post.
10. Re-install the handlebars and bar caps.
11. Inststall the odometer on the new bar caps. Install the plastic tank cover.



Pic 1



Pic 2

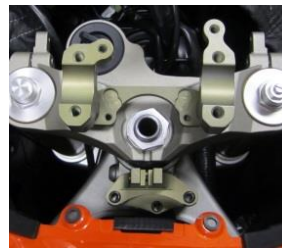

Pic 3



Pic 4

For any questions feel free to call our tech department at 619.661.0101
www.GPRStabilizer.com