


# 11-13 Yamaha Super Tenere Mounting Instructions

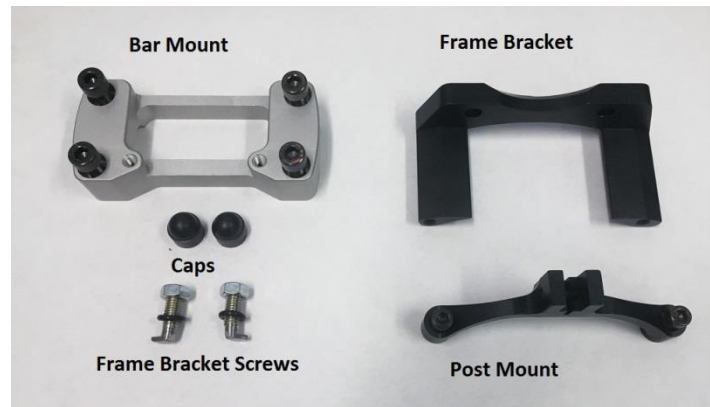

1. First off you can remove the stock bar caps and install the new GPR bar mount. (Pic 1)
2. To install the frame bracket to the frame, you will first need to install the frame bracket screws. You can do this by “hooking” the hook into the holes on the frame rails. The supplied O-ring that is on the bolt will hold the screws in place to install the frame bracket. (Pic 2)
3. With both screws in place, Install the frame bracket over the screws and use the supplied nuts to tighten the frame bracket down. TIGHTEN TO 10 FT. LB’s. Install the caps over the nuts. (Pic 3+4)
4. With the frame bracket installed, you can now bolt the Post Mount to the frame bracket. (Pic 5)
5. Bolt the GPR V4 Stabilizer to the bar mount making sure the stabilizer arm is in the post mount slot. Then tighten the post mount pinch bolt. (Pic 6)



Pic 1



Pic 2



Pic 3



Pic 4



Pic 5



Pic 6

Technical Questions? Call out tech at 619.661.0101 [www.gprstabilizer.com](http://www.gprstabilizer.com)